



B. HEPWORTH
AND COMPANY LIMITED

**...performance wiper
systems...**

INSTALLATION AND MAINTENANCE
INSTRUCTIONS FOR THE
70NM COMPACT
SINGLE STATION
WINDSCREEN WIPER SYSTEM
COMPLETE WITH
1000 SERIES CONTROLLER

CONTENTS

CONTENTS	2
GENERAL INFORMATION AND SAFETY SUMMARY	3
Safety Precautions	3
Introduction	3
CHAPTER 1	4
Functional and Equipment Description of System	4
Wiper Motor Assembly	4
Exploded View of Linkage	5
Wiper Arm Assembly	6
Wiper Arm Assembly	7
CHAPTER 2	7
Installation Instructions	7
Drilling Diagram	8
Fitting the Wiper Motor Assembly	8
Vari Arc Units - Arc adjustment	9
Fitting the Wiper Blade	9
Fitting the Wiper Arm Assembly	10
CHAPTER 3	10
Maintenance	10
Introduction	10
Safety Precautions	11
Scheduled Maintenance Action Check	11
Table 1	11
Table 1- continued	12
CHAPTER 4	12
Troubleshooting	12
Introduction	12
Safety Precautions	12
Troubleshooting Procedures	12
Table 2	12
Table 2 - Continued	13
Chapter 5	14
Maintenance Instructions	14
To Replace the Wiper Blade	14
To Replace the Wiper Arm	14
To Remove the Entire Wiper Motor Unit Assembly	15
To Replace the Drive Crank Assembly	16
To Replace Wiper Motor	17
To Replace Tie Bar	17
To Replace Lever/Liner/Spindle Sub Assembly	18
Vari Arc Units - Arc adjustment	19
Series 1000 Control Unit	Error! Bookmark not defined.
Installation of Controller	Error! Bookmark not defined.
Functional Check of Controller	Error! Bookmark not defined.
Fusing	Error! Bookmark not defined.
1000-Front panels	Error! Bookmark not defined.
Wiring a 230v DC Unit to a 1000 series controller	Error! Bookmark not defined.

GENERAL INFORMATION AND SAFETY SUMMARY

As we will have no influence on the installation of complete windscreen wiper systems if installation is to be carried out by the customer, we are unable to accept liability for installation errors.

If you require any additional information or any special problems arise which the installation/maintenance instructions do not treat in sufficient detail please contact B. Hepworth and Co Ltd directly.

Safety Precautions

CAUTION! BEWARE OF INJURY!

BEFORE WORKING ON THE WIPER SYSTEM, OBSERVE THE FOLLOWING REMARKS WITHOUT FAIL!

Most wiper motors have a park setting, which permits them to default to the parked position if connected to the vehicle electrical system, even when the wiper is switched off. **FOR THIS REASON, AT THIS POINT IN TIME, NEITHER MAY THE WIPER ARM BE MOUNTED, NOR MAY ANY PERSON HAVE HANDS, FINGERS, ETC ANYWHERE NEAR THE WIPER SYSTEM.** Even small wiper motors can neither be braked nor stopped by hand.

NEVER REACH INTO THE AREA OF THE ROD LINKAGE WHEN THE SYSTEM IS RUNNING!

When putting into service (i.e. when connecting the wiper motor to the vehicle electrical system, even if the wiper switch is in the 0 position), never leave any loose items such as screwdrivers in the area of the wiper system, as flying objects could lead to injury.

Please ensure the equipment is handled with care. Do not drop or bang the equipment down on a hard surface taking extra care around the area where the motor shaft is situated. Do not hammer the motor shaft when installing the equipment, as this will cause the motor gear plate to deform causing premature failure of the unit.

Introduction

The Windscreen Wiper system utilised is detailed on the following pages. The primary components that form the Windscreen Wiper System are the wiper motor linkage, the wiper arm assemblies and wiper blades.

CHAPTER 1

Functional and Equipment Description of System


Wiper Motor Assembly

The wiper motor and bracket is shown in Figures 1. & 2. The electric wiper motor forms the central part of the windshield wiper system. The motor is mounted on a fabricated mild steel bracket which is polyester powder coated to prevent corrosion. The motor is connected electrically by means of a multi-pin connector. Ref Figure 3.

The drive lever is secured to the wiper motor shaft and connected through a tie bar, to the spindle lever assembly. These components transfer the motor shaft rotation to the wiper arm assemblies.


The drive mechanism provided transfers the rotary output from the motor; to a reciprocating motion of the spindles, this mechanism is zinc plated and is sized to give the correct angle of arc for the windscreen wiper arm being driven.

The Spindles that drive the wiper arms pass through the bulkhead, connecting the drive mechanism to the wiper arm; these are manufactured from stainless steel, to prevent corrosion. The spindles are driven from the main drive crank by connecting tie bars which distributes the load evenly between the arms of the wiper arm thus reduces the load on the individual interfaces between the wiper arm and the spindles.

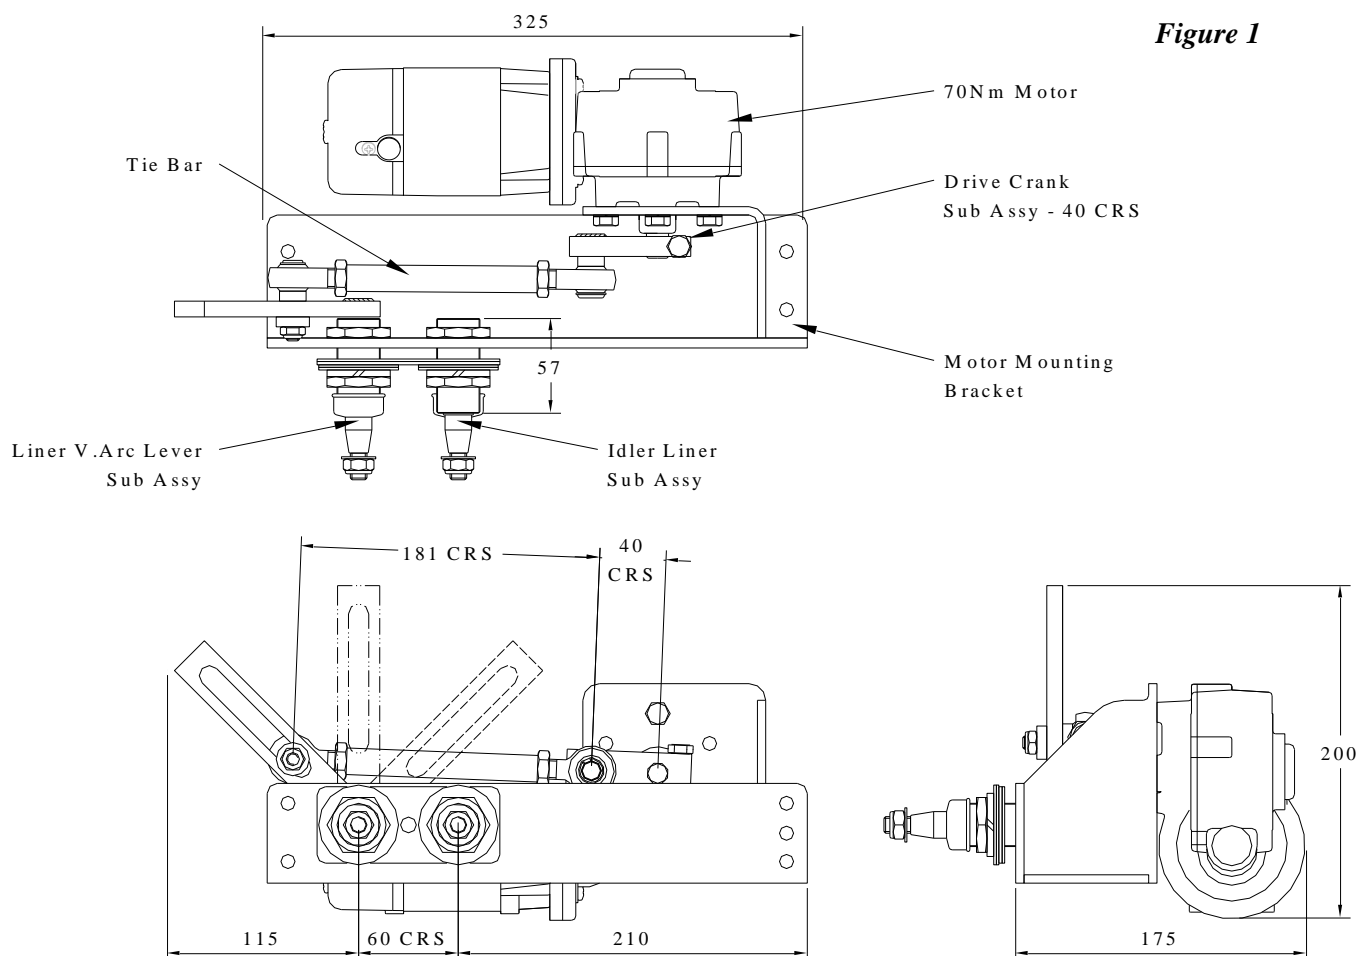

Exploded View of Linkage

Figure 2

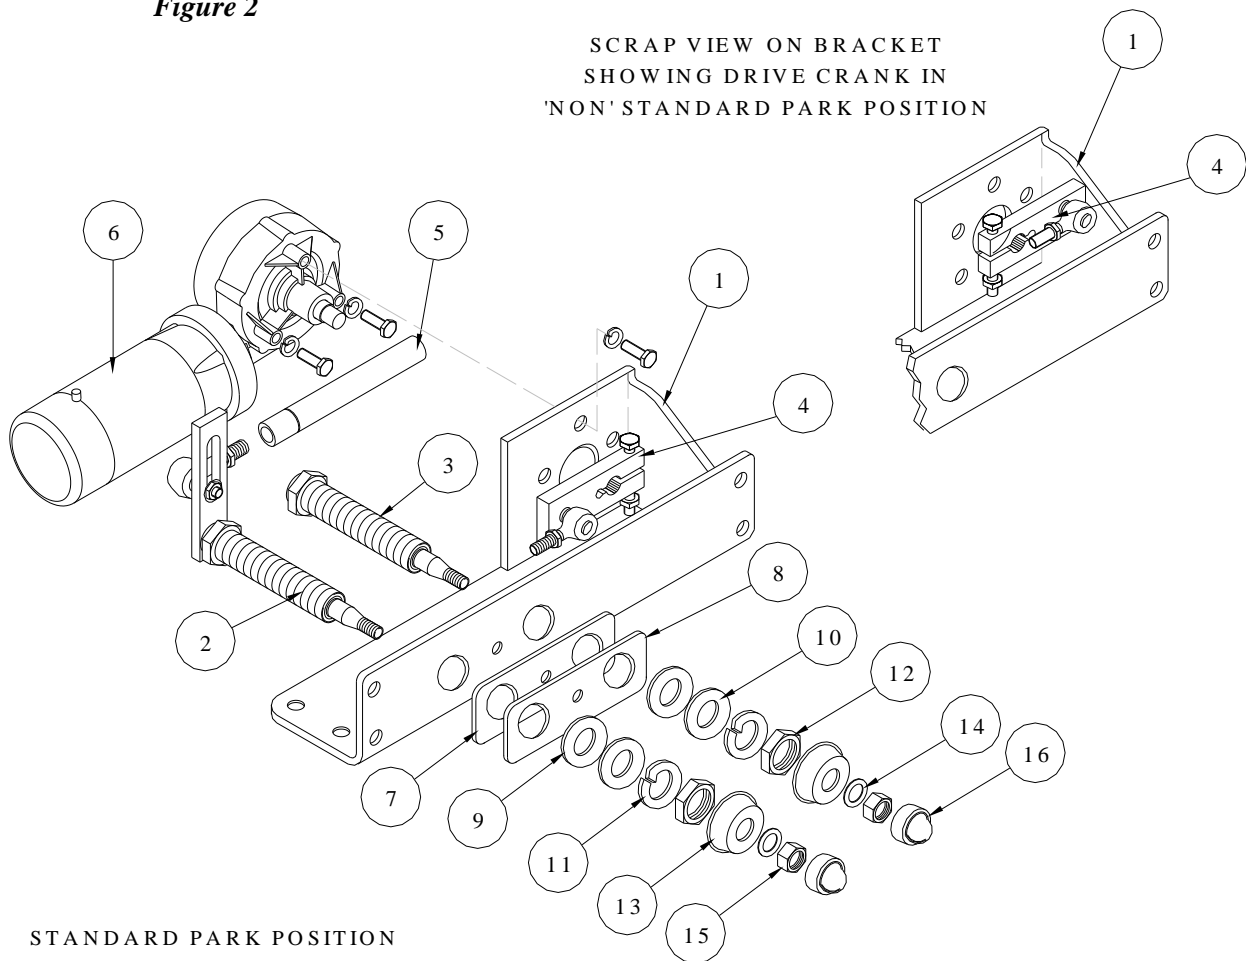

ITEM	DESCRIPTION	QTY
1	Motor Mounting Bracket	1
2	Liner V.Arc Lever Sub Assy	1
3	Idler Liner Sub Assy	1
4	Drive Crank Sub Assy 40 Crs	1
5	Tie Bar – 115mm Overall	1
6	70Nm (IER) Motor	1
7	Idler Plate - Gasket	1
8	Idler Plate	1

ITEM	DESCRIPTION	QTY
9	26mm Washer - Neoprene	2
10	26mm Washer – Flat	2
11	26mm Washer – Single Coil	2
12	M26 Hex. Nut	2
13	26mm Weather Cap	2
14	10mm Washer - Flat	2
15	M10 Nylock Nut	2
16	10mm Nut Weather Cap	2


Wiper Arm Assembly

The wiper arm is manufactured from stainless steel and is polyester powder coated to prevent corrosion and to be of good appearance.

The wiper arm is shown in Figure 4. One wiper arm assembly is used on each unit. The wiper arm assembly mounts directly onto the spindles protruding through the bulkhead. The wiper arm is secured to the spindle via a series of nuts and washers.

The blade is secured to the arm assembly using the blade clip arrangement on the arm and blade bolt.

Figure 4 – Medium Duty Arm

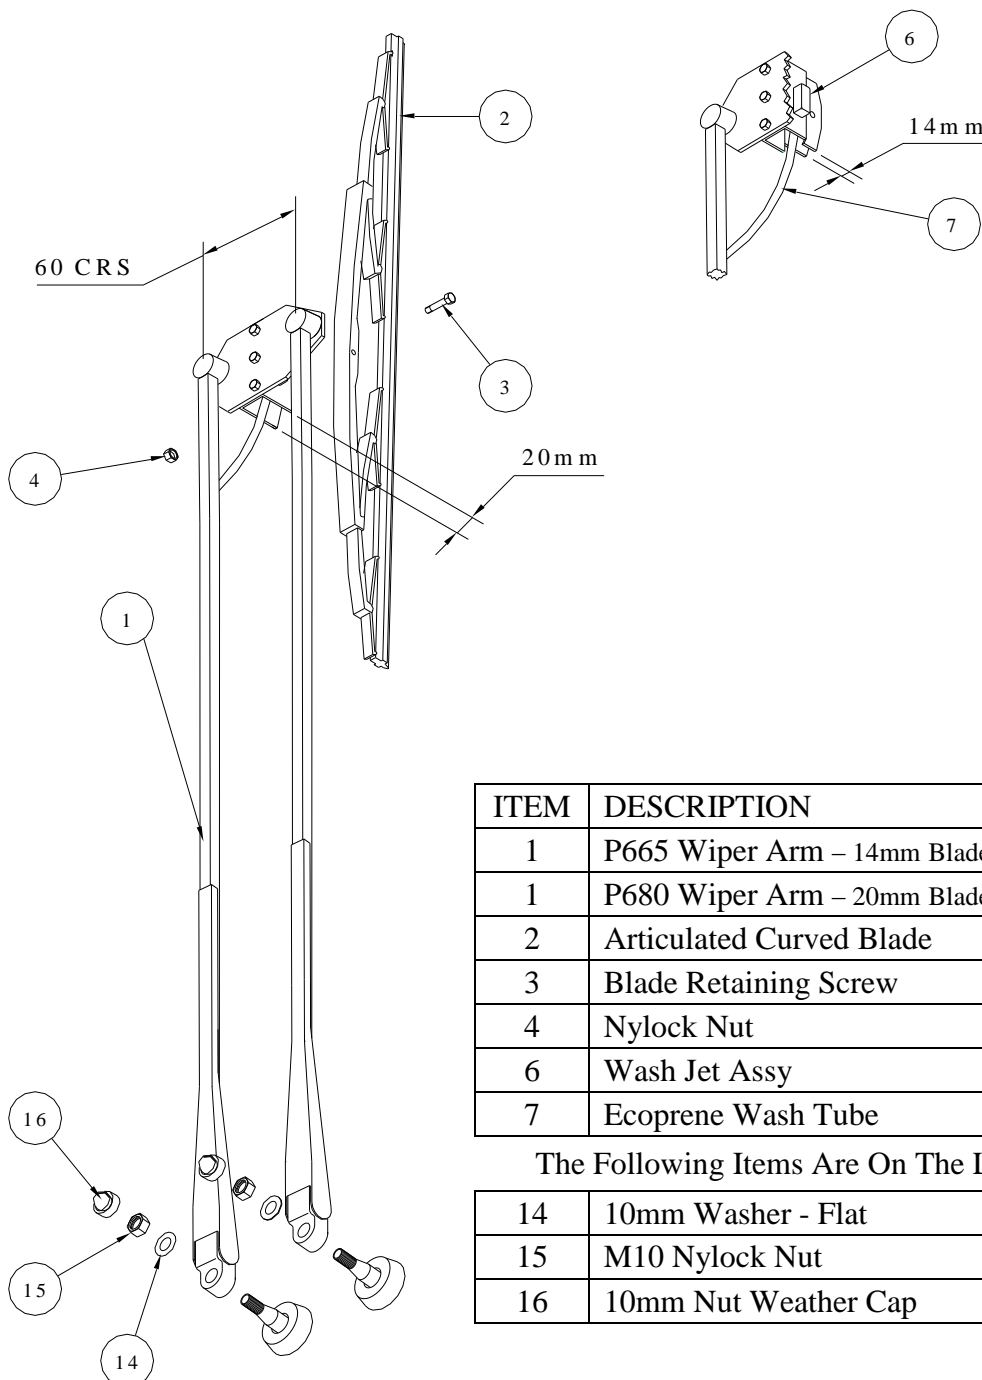

ITEM	DESCRIPTION	QTY
1	P665 Wiper Arm – 14mm Blade Clip	1
1	P680 Wiper Arm – 20mm Blade Clip	1
2	Articulated Curved Blade	1
3	Blade Retaining Screw	1
4	Nylock Nut	1
6	Wash Jet Assy	1
7	Ecoprene Wash Tube	Metres

The Following Items Are On The Linkage

14	10mm Washer - Flat	2
15	M10 Nylock Nut	2
16	10mm Nut Weather Cap	2


Wiper Arm Assembly

The wiper arm is manufactured from stainless steel and is polyester powder coated to prevent corrosion and to be of good appearance.

The wiper arm is shown in Figure 4. One wiper arm assembly is used on each unit. The wiper arm assembly mounts directly onto the spindles protruding through the bulkhead. The wiper arm is secured to the spindle via a series of nuts and washers.

The blade is secured to the arm assembly using the blade clip arrangement on the arm and blade bolt.

Figure 4 – Heavy Duty Arm

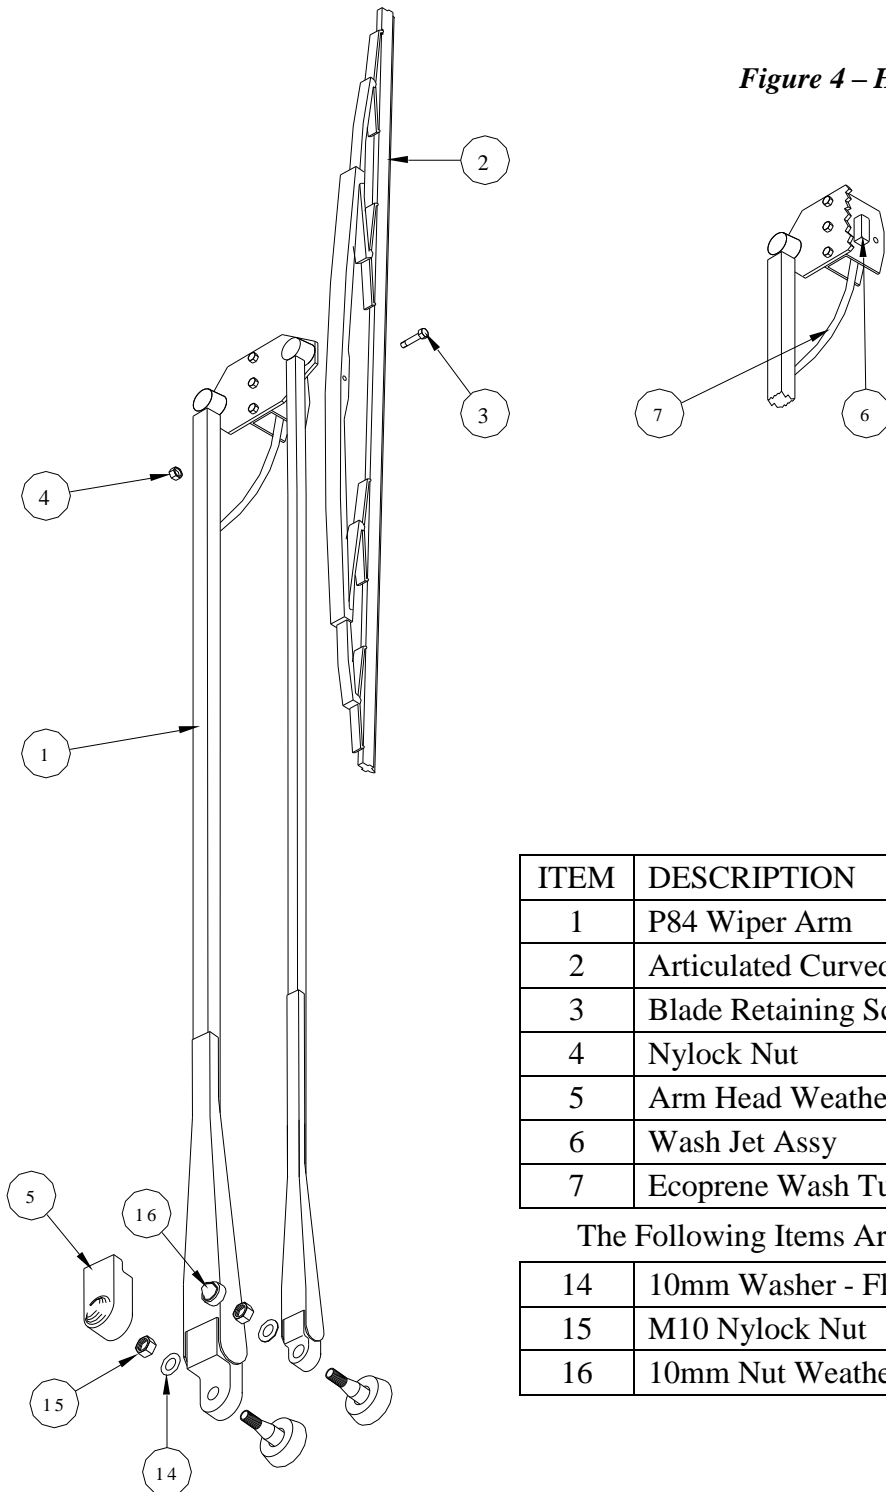

ITEM	DESCRIPTION	QTY
1	P84 Wiper Arm	1
2	Articulated Curved Blade	1
3	Blade Retaining Screw	1
4	Nylock Nut	1
5	Arm Head Weather Cap	1
6	Wash Jet Assy	1
7	Ecoprene Wash Tube	Metres

The Following Items Are On The Linkage

14	10mm Washer - Flat	2
15	M10 Nylock Nut	2
16	10mm Nut Weather Cap	2

CHAPTER 2

Installation Instructions


These instructions are meant as a guide. If you experience any difficulty in the fitting of these units, please do not hesitate to contact

us for advice.

Drilling Diagram

NOTE - Drilling Diagram is NOT to size and is for reference only

DRILLING DIAGRAM - FOR 70Nm COMPACT UNITS

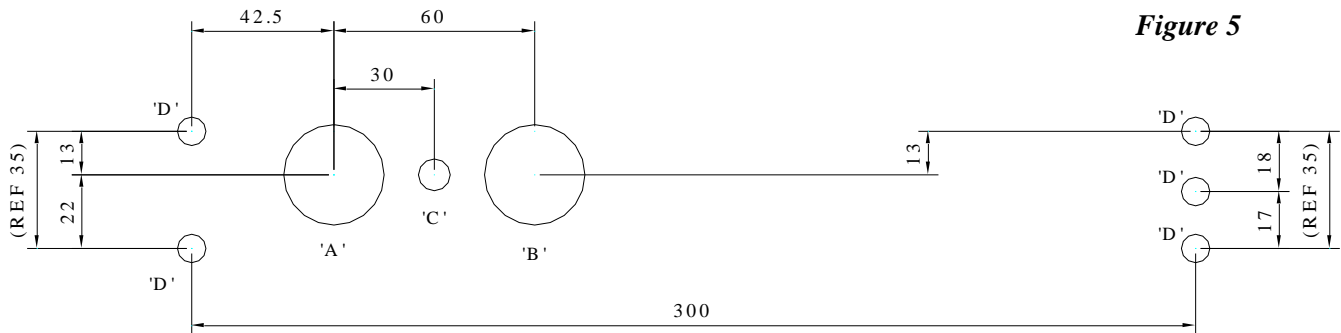

Drill holes 'A' and 'B' at Ø30mm (Note Hole 'B' not required on Pendulum units)

Drill hole 'D' at Ø8.5mm (5 options shown)

Drill hole 'C' at Ø9.5mm (Only required if wash tube is fitted through bulkhead between spindles)

Fitting the Wiper Motor Assembly

When the spindle positions have been drilled in the bulkhead, the following procedures apply.

With Reference to Figures 1 & 2, Pages 4 & 5.

1. Remove Weather Caps - (Item 16). M10 Nuts - (Item 15). Flat Steel Washers - (Item 14), Weather Caps - (Item 13). M26 Nuts - (Item 12). Single Coil Washers - (Item 11), Flat Steel Washers - (Item 10), Neoprene Washers - (Item 9), Idler Plate - (Item 8) and finally Idler Plate Gasket - (Item 7). NOTE: - Keep safe as will be required on assembly.

NOTE Motor Unit is MOUNTED from INSIDE Bulkhead.

2. **From Inside Bulkhead** - Fit Motor Unit inside Bulkhead and fix in place through predrilled mounting holes (Fixing bolts not supplied.)
3. **From Outside Bulkhead** - ENSURE a proprietary sealant (Not supplied) is used around all points of entry through bulkhead.
4. **Fit following items** - Idler Plate Gasket - (Item 7) and Idler Plate - (Item 8) over both Liners, next to bulkhead, then onto each Liner a Neoprene Washer - (Item 9), a Flat Steel Washer - (Item 10), a Single Coil Washer - (Item 11), a M26 Nut - (Item 12) and finally a Weather Cap - (Item 13).


Vari Arc Units - Arc adjustment

1. Run Motor to insure it is parked correctly; then disconnect all Electrical Power.
2. Slacken Bearing Nuts at both ends of Tie Bar and Securing Nylock Nut - (*Item 26*) on Vari Arc Lever.
3. Slide Bearing/Tie Bar Assembly Pivot Pin - (*Item 27*) towards Liner/Spindle Assembly to INCREASE arc to 90° max or away from Liner/Spindle Assembly to DECREASE arc to 40° min.
4. Ensure you note markings on lever when correct arc is reached. **Important: Pantograph Systems must not exceed 90° arc of wipe**
5. Adjust arc until blade parks approximately 75mm from edge of screen when screen is dry. Test on a wet screen to prove clearance is acceptable.
6. Tighten Bearing Nuts at both ends of Tie Bar and Securing Nylock Nut - (*Item 26*) on Vari Arc Lever (Torque 20Nm)

IMPORTANT: Ensure BEARING CENTRES are as stated in drawing (Figure 1)


Fitting the Wiper Blade

With Reference to Figure 4, Pages 6 & 7.

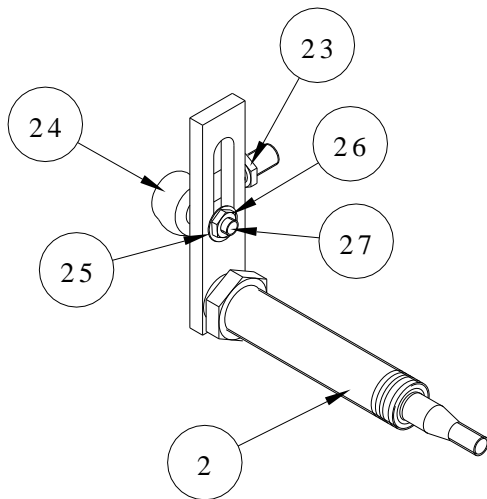

ITEM	DESCRIPTION	QTY
2	Liner V.Arc Lever Sub Assy	1
23	12mm Right Hand Bearing Nut	1
24	12mm Right Hand Bearing	1
25	8mm Washer – Flat	1
26	M8 Securing Nylock Nut	1
27	V.Arc Bearing Pivot Pin	1

1. Remove Blade Retaining Screw - (*Item 3*) and Nut - (*Item 4*) from Blade Clip on arm.
2. Place Wiper Blade into Blade Clip on Arm.
(*Note captive end on blade rubber to be at top of screen.*)
3. Ensure that all fixing holes align. Secure in place with Blade Retaining Screw - (*Item 3*) and Nut - (*Item 4*). Important DO NOT over torque Blade Screw and Nut, as Blade is required to pivot on glass.

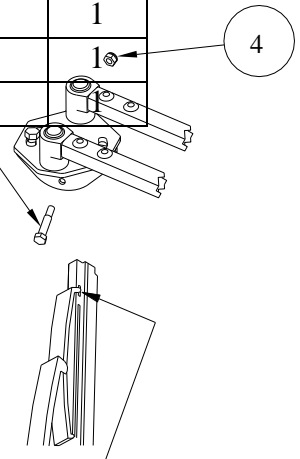

CAPTIVE CLIP
TO BE AT THE
TOP OF SCREEN
Page 7 of 27

The wiper blades should be changed every 6 months but this is dependent on use and operating conditions

(Wiper Blades - Ref Table1, Page 13 & Table 2 – continued, Page 15)

Fitting the Wiper Arm Assembly

IMPORTANT: - Blade must be fitted to Arm prior to Arm being fitted. (This is to prevent Blade Clip damaging screen,)

With Reference to Figure 4, Pages 6 & 7.

1. **From Inside Bulkhead** - Run Motor to insure it is parked correctly, then disconnect all Electrical Power.
2. **From Outside Bulkhead** - While Unit is being run, it is IMPORTANT to observe direction drive spindle rotates in immediately before it stops. This direction will give PARK POSITION.
3. Fit Arm onto Spindle allowing Blade to lie as shown in drawings approx 75mm from edge of glass in PARKED POSITION.
4. Fit a Flat Washer - (Item 14) on to spindle next to Arm Head, then a M10 Nylock Nut - (Item 15)
5. Only tighten Nut sufficiently to allow Arm and Blade to travel across glass when Motor is run to see if positioning is correct.
6. If incorrectly positioned - DO NOT ATTEMPT TO ROTATE OR TWIST ARM ON SPINDLE this will damage splined end of drive spindle, resulting in Arm and Blade slipping in operation.
7. To correct alignment errors, - loosen Nut and gently pull Arm up Spindle, realign and repeat stages above.
8. When correctly aligned, tighten Spindle Nut to 38Nm. Then fit Weather Caps supplied with Arm and Linkage.


CHAPTER 3

Maintenance

Introduction

This chapter contains all preventative maintenance and removal and replacement procedures for the windscreen wiper components. Preventative maintenance procedures include the information required to replace the wiper blades.

Figure 5

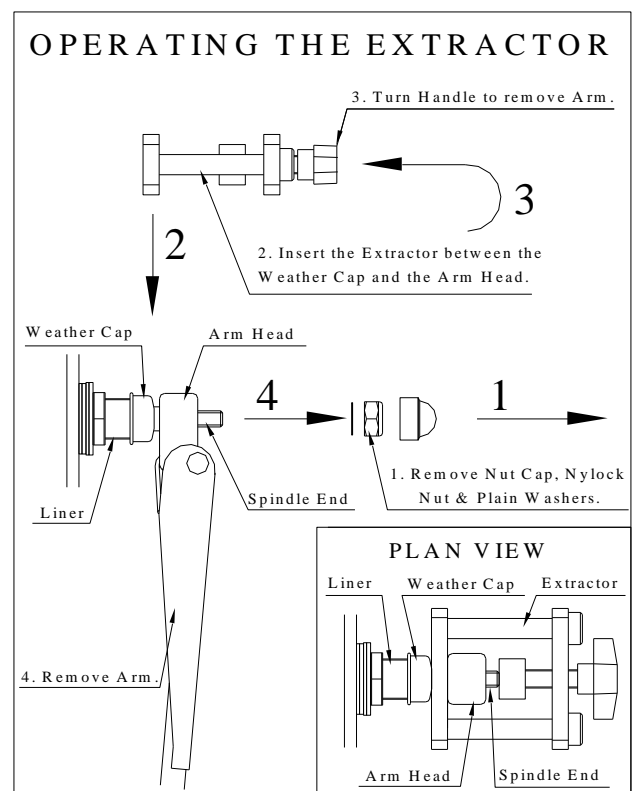

Safety Precautions

Always disconnect the power when servicing the Windscreen Wiper System, or on any ancillary components. Serious damage to the Equipment and/or Personal Injury may occur if the power is not disconnected.

Scheduled Maintenance Action Check

Table 1 is a Scheduled Maintenance Action Index. The index provides a list of all performance tests if applicable and preventative maintenance procedures. The table has three columns: Periodicity, Equipment and Task

The Periodicity column indicates the intervals between the maintenance tests and preventative maintenance procedures.

The equipment column lists the equipment, assembly or subassembly that corresponds to the maintenance action.

The task column lists the maintenance task to be performed.

Table 1

PERIODICITY	EQUIPMENT	TASK
Daily	Wiper Blades	Inspect wiper blades for damage, torn or missing rubber blades. Replace wiper blades as required
Daily	Windscreen Wiper System	Perform function test of wiper washer system. Do not carry out function test on a dry screen
Daily	Washer Tubing and Spray Nozzle	Inspect tubing for damage or loose connection on nozzle. Check operation of spray nozzle on windscreen
Daily	Wash Tank	Insure wash tank is filled with washer fluid to prevent wipers being used on a dry screen
3 Monthly	Fixings of wiper arm to wiper spindle	Check torque settings M10 = 38Nm
Six Monthly or As required	Wiper Blades	Replace wiper blades

Table 1- continued

PERIODICITY	EQUIPMENT	TASK
6 Monthly	Complete System	<p>Check all torque settings for complete wiper system:</p> <p>M8 = 15Nm (<i>on Motor Bolts</i>)</p> <p>M8 = 25Nm (<i>on Splined Drive Crk Nut & Bolt</i>)</p> <p>M8 = 20Nm (<i>on V.A. Lever</i>)</p> <p>M10 = 38Nm (<i>on Spindle Nut</i>)</p> <p>M12 = 20Nm (<i>on Tie Bar with Threadlock</i>)</p> <p>M26 = 30Nm (<i>on Brass Liner</i>)</p> <p>M26 = 80Nm (<i>on SS Liner – Metal Bulkhead</i>)</p> <p>M26 = 50Nm (<i>on SS Liner - G.R.P.</i>)</p> <p>Carry out a visual check for wear in rod end</p>

CHAPTER 4

Troubleshooting

Introduction

This chapter provides all the instructions and information necessary to locate problems and conduct tests on the windscreen wiper system components. The trouble-shooting chart is provided for logical isolation of faults.

Safety Precautions

Always disconnect the power when servicing the Windscreen Wiper System, or on any ancillary components. Serious damage to the Equipment and/or Personal Injury may occur if the power is not disconnected.

Troubleshooting Procedures

Typical windshield wiper system troubleshooting procedures are contained in Table 2. These troubleshooting and repair procedures should be followed when encountering operational problems with the windshield wiper system

Table 2

SYMPTOM	PROBABLE CAUSE	TESTS AND CHECKS	CORRECTIVE ACTION
Wiper motor fails to start	On/off switch	Check position of switch	Turn switch to on position
	Voltage Level	Check supply voltage to switch. Check wiring and switch connections	Replace switch. Correct loose wiring connections. Replace broken wires
	System Jammed	Check wiper linkage	Release linkage. Release wiper arm
	Defective wiper motor		Replace motor
Motor shaft turns but linkage & arm remain static	Defective or loose drive crank	Check linkage for a loose drive crank	Secure or replace drive crank. Clean motor output shaft with wire brush before replacing

Table 2 - Continued

SYMPTOM	PROBABLE CAUSE	TESTS AND CHECKS	CORRECTIVE ACTION
System operates but wiper arm remains static	Wiper arm	Check for loose wiper arm connection onto drive spindle	Secure or replace wiper arm after cleaning spindles. Torque to M10 = 38Nm
Slow Motor Operation	Voltage Level	Check for incorrect supply to wiper system	Correct voltage supply problem
	Switch		Replace faulty switch
	Motor Bracket	Check for broken bracket	Replace defective bracket
	Linkage	Check to see if Linkage is free moving	Free linkage replace worn or damaged components
	Defective Wiper Motor		Replace Wiper Motor
Erratic Motor	Voltage level	Check for incorrect supply to wiper system	Correct voltage supply problem
	Switch	Check for loose or broken wires	Replace faulty switch
	Wiring		Repair or replace wiring up to motor. Replace motor if this wiring is damaged
Excessive wear on blade.	Spring pressure.	Use spring balance on centre of blade clip till blade begins to lift off glass. 1 – 1.1/2 kg	Replace spring/arm.
Arm and Blade not operating correctly or over sweep operation	Voltage level	Check for incorrect supply to wiper system	Correct voltage supply problem
	Linkage	Check for worn or broken linkage	Replace Linkage
	Spindle	Check for excessive wear in spindle	Replace Spindle
	Arm	Check that arm is not loose on spindle	Re-tighten Spindle
		Check for excessive wear on arm	Replace Arm, after cleaning spindle spline with wire brush.
	Blade	Check fixing for wear	Replace Blade
		Check blade for wear	Replace Blade
Washer system not working correctly	No water from jets	Check water level in tank	Fill tank
		Check for damage to tank	Replace tank
		Check Pump is operational	Replace pump if faulty

CHAPTER 5

Maintenance Instructions

IMPORTANT NOTE:

Before replacing the Drive Crank, Motor, Tie Bar or Liner/Lever Sub Assemblies, it is necessary to remove the entire Wiper Motor Unit from the Bulkhead

Retain all items removed in a safe place, as they will be required on reassembly. If you experience any difficulty in fitting these units, please do not hesitate to contact us for advice.


Use the drawings for reference.

To Replace the Wiper Blade

Removal


With Reference to Figure 4, Pages 6 & 7.

1. **From Inside Bulkhead** - Run Motor to insure it is parked correctly; then disconnect all Electrical Power.
2. From Outside Bulkhead - Carefully pull Wiper Arm Assembly away from windscreen to enable access to Wiper Blade.
3. Undo M4 Nylock Nut - (*Item 4*), remove it and Blade Retaining Screw - (*Item 3*)
4. Remove Blade from Blade Clip on Arm.

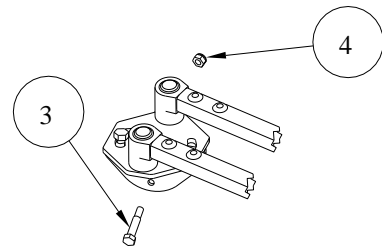

Replacement

1. **From Outside Bulkhead** - Replace Wiper Blade - (*Item 2*) into Blade Clip (*Note If only one end of blade rubber captive, it must be at top of screen.*)
2. Ensure that all fixing holes align. Secure in place with Blade Retaining Screw - (*Item 3*) and Nut - (*Item 4*). Important DO NOT over torque Blade Screw and Nut, as Blade is required to pivot on glass.

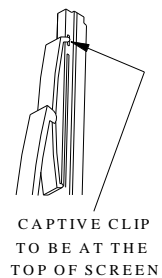

The wiper blades should be changed every 6 months but this is dependent on use and operating conditions (*Wiper Blades - Ref Table1, Page 13 & Table 2 – continued, Page 15*)

To Replace the Wiper Arm

Removal

With Reference to Figure 4, Pages 6 & 7.

1. **From Inside Bulkhead** - Run Motor to insure it is parked correctly; then disconnect all Electrical Power.

2. ***From Outside Bulkhead*** - While Unit is being run it is IMPORTANT to observe direction drive spindle rotates in, immediately before it stops. This direction will give PARK POSITION.
3. Remove 10mm Nut Cap(s) - (*Item 16*), M10 Nylock Nut(s) - (*Item 15*) and 10mm Flat Washer(s) - (*Item 14*). Then using Arm Extraction Tool carefully remove Arm (*Arm Extractor Tool is available see Figure 5, Page 10 for instructions*)

Replacement

IMPORTANT: - Blade must be fitted to Arm prior to Arm being fitted. (This is to prevent Blade Clip damaging screen,)

(Refer to fitting instructions for replacement, Page 12)

To Remove the Entire Wiper Motor Unit Assembly

With Reference to Figures 1 & 2, Pages 4 & 5.

Removal

1. ***From Inside Bulkhead*** - Run Motor to insure it is parked correctly; then disconnect all Electrical Power. Disconnect wiring from Motor.

IMPORTANT: Please make a note of PARKED position of ARMS and BLADES, before removal


2. ***From Outside Bulkhead*** - Remove Arms
With referernce to Replace the Wiper Arm, Page 14)
3. Remove 26mm Weather Caps - (*Item 13*), M26 Nuts - (*Item 12*), 26mm Single Coil Washers - (*Item 11*), 26mm Flat Steel Washers - (*Item 10*) 26mm Neoprene Washers - (*Item 9*), Idler Plate - (*Item 8*) and finally Idler Plate Gasket - (*Item 7*).
4. ***From Inside Bulkhead*** - Unscrew Fixing Bolts from Motor Mounting Bracket - (*Item 1*).
5. Carefully remove entire Wiper Motor Unit from Bulkhead.

Replacement

1. ***From Inside Bulkhead*** – Fit Motor Unit, through predrilled mounting holes and fix in place. (Fixing bolts not supplied)
2. ***From Outside Bulkhead*** - ENSURE a proprietary sealant (Not supplied) is used around all points of entry through bulkhead.
3. ***Fit following items on to Liners- next to bulkhead***, Idler Gasket - (*Item 7*), Idler Plate - (*Item 8*), a Neoprene Washer - (*Item 9*), a Flat Steel Washer - (*Item 10*), a Single Coil Washer - (*Item 11*), a Nut - (*Item 12*) and a Weather Cap - (*Item 13*).
4. Replace Arm and Blade
(Refer to fitting instructions for replacement, Page 12)

To Replace the Drive Crank Assembly

ITEM	DESCRIPTION	QTY
4	Drive Crank Sub Assy 40 Crs	1
5	Tie Bar – 115mm Overall	1
6	70Nm 24v (IER) Motor	1
17	8mm Washer – Single Coil	3
18	M8 Fixing Bolts	3
19	M8 Securing Bolt	1
20	M8 Securing Nylock Nut	1
21	M12 Left Hand Bearing Nut	1
22	M12 Left Hand Bearing	1

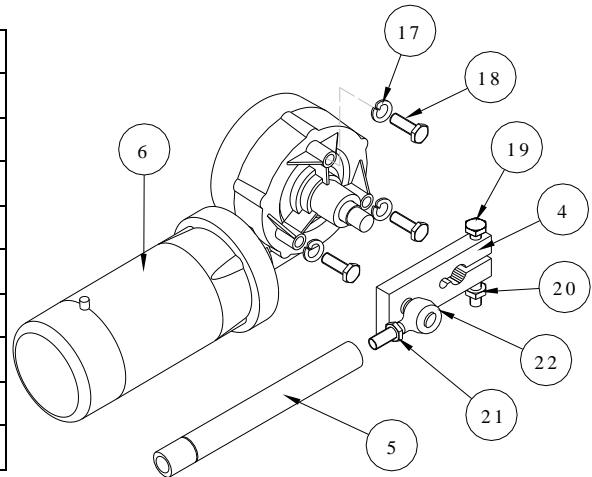

Removal

1. From Inside Bulkhead - Run Motor to insure it is parked correctly; then disconnect all Electrical Power.
2. Carefully remove entire Wiper Motor Unit from Bulkhead.
(*With reference to page 16.*)

IMPORTANT: Please make a note of Drive Crank POSITION relative to SPINDLE LEVER, as this will affect PARK position for ARMS and BLADES, i.e. SPINDLE LEVER facing towards Motor or away from Motor

3. From Front of Unit - Slacken both Bearing Nuts at either end of Tie Bar.
4. Slacken Drive Crank Nut - (*Item 20*), and Bolt - (*Item 19*), carefully remove Drive Crank/Bearing Assy - (*Item 4*), from Motor Drive Shaft.
5. Unscrew Tie Bar - (*Item 5*) from Drive Crank Bearing (Left Hand Thread) - (*Item 22*)

Replacement

1. From Front of Unit - Screw Tie Bar onto Bearing (Left Hand Thread) - (*Item 22*) of NEW Drive Crank/Bearing Assy - (*Item 4*).
2. Carefully fit Drive Crank/Bearing Assy - (*Item 4*), over Motor Drive Shaft, (referring to Note after operation 2 on 'To Remove' for position.) Tighten Drive Crank Nut - (*Item 20*), and Bolt - (*Item 19*).
3. Tighten both Bearing Nuts at either end of Tie Bar.

IMPORTANT: Ensure BEARING CENTRES are as stated in drawing (Figure 1)

4. **From Inside Bulkhead** - Replace entire Wiper Motor Unit into Bulkhead
(*Refer to replacement instructions, Page 16.*)
5. Replace Arm and Blade
(*Refer to fitting instructions for replacement, Page 12*)

To Replace Wiper Motor

Removal

1. **From Inside Bulkhead** - Run Motor to insure it is parked correctly; then disconnect all Electrical Power.
2. Carefully remove entire Wiper Motor Unit from Bulkhead
(*With reference to page 16.*)

IMPORTANT: Please make a note of Drive Crank POSITION relative to SPINDLE LEVER, as this will affect PARK position for ARMS and BLADES, i.e. SPINDLE LEVER facing towards Motor or away from Motor

3. **From Front of Unit** - Slacken both Bearing Nuts at either end of Tie Bar.
4. Slacken Drive Crank Nut - (*Item 20*), and Bolt - (*Item 19*), carefully remove Drive Crank/Bearing Assy - (*Item 4*), from Motor Drive Shaft.
5. Unscrew three fixing bolts - (*Item 18*) and remove with washers - (*Item 17*) remove Wiper Motor - (*Item 6*)

Replacement

1. From Rear of Unit - Replace Wiper Motor - (*Item 6*) replace and tighten three fixing bolts - (*Item 18*) and washers- (*Item 17*)
2. From Front of Unit - Carefully fit Drive Crank/Bearing Assy - (*Item 4*), over Motor Drive Shaft, (*referring to Note after operation 2*) on 'Removal' for position. Tighten Drive Crank Nut - (*Item 20*), and Bolt - (*Item 19*).
3. Tighten both Bearing Nuts at either end of Tie Bar.

IMPORTANT: Ensure BEARING CENTRES are as stated in drawing (Figure 1)

4. **From Inside Bulkhead** - Replace entire Wiper Motor Unit into Bulkhead
(Refer to replacement instructions, *Page 16*).
5. Replace Arm and Blade
(*Refer to fitting instructions for replacement, Page 12*)

To Replace Tie Bar

Removal

1. **From Inside Bulkhead** - Run Motor to insure it is parked correctly; then disconnect all Electrical Power.
2. Carefully remove entire Wiper Motor Unit from Bulkhead.
(*With reference to page 16.*)

IMPORTANT: Please make a note of Drive Crank POSITION relative to SPINDLE LEVER, as this will affect PARK position for ARMS and BLADES, i.e. SPINDLE LEVER facing towards Motor or away from Motor

3. **From Front of Unit** - Slacken both Bearing Nuts at either end of Tie Bar.
4. Slacken Drive Crank Nut - (*Item 20*), and Bolt - (*Item 19*), carefully remove Drive Crank/Bearing Assy - (*Item 4*), from Motor Drive Shaft.
5. Unscrew Tie Bar - (*Item 5*) from Drive Crank Bearing (Left Hand Thread) - (*Item 22*)
6. Repeat operation 5 on Liner/Lever/Bearing Assy (Right Hand Thread) and remove Tie Bar- (*Item 5*),

Replacement

1. **From Front of Unit** - Screw NEW Tie Bar (NOTE groove is on Right Hand end of Tie Bar) onto Bearing (Right Hand Thread) at Liner/Lever/Bearing Assy.
2. Screw NEW Tie Bar on to Bearing (Left Hand Thread) - (*Item 22*) of Drive Crank/Bearing Assy.
3. Carefully fit Drive Crank/Bearing Assy - (*Item 4*), over Motor Drive Shaft, (*referring to Note after operation 2*) on 'Removal' for position. Tighten Drive Crank Nut - (*Item 20*), and Bolt - (*Item 19*).
4. Tighten both Bearing Nuts at either end of Tie Bar.

IMPORTANT: Ensure BEARING CENTRES are as stated in drawing (Figure 1)

5. **From Inside Bulkhead** - Replace entire Wiper Motor Unit into Bulkhead (*Refer to replacement instructions, Page 16*).
6. Replace Arm and Blade (*Refer to fitting instructions for replacement, Page 12*)

To Replace Lever/Liner/Spindle Sub Assembly

Removal

1. **From Inside Bulkhead** - Run Motor to insure it is parked correctly; then disconnect all Electrical Power.
2. Carefully remove entire Wiper Motor Unit from Bulkhead. (*With reference to page 14.*)

IMPORTANT: Please make a note of Drive Crank POSITION relative to SPINDLE LEVER, as this will affect PARK position for ARMS and BLADES, i.e. SPINDLE LEVER facing towards Motor or away from Motor

3. Slacken both Bearing Nuts on Tie Bar.

IMPORTANT: Make a note of protrusion length of Liner and/or Spindle from front of Bracket - (*Item 1*)


4. Unscrew Tie Bar from Right Hand Bearing of Liner/Lever/Bearing Assy.
5. Unscrew remove entire Liner/Lever/Bearing Assy from Bracket.

Replacement

1. Screw entire Liner/Lever/Bearing Assy into Bracket..
2. Screw Tie Bar onto Right Hand Bearing at Main Liner/Lever/Bearing Assy.
3. Tighten both Bearing Nuts on Tie Bar.

IMPORTANT: Ensure BEARING CENTRES are as stated in drawing (Figure 1)

4. **From Inside Bulkhead** - Replace entire Wiper Motor Unit into Bulkhead
(Refer to replacement instructions, Page 16).
5. Replace Arm and Blade
(Refer to fitting instructions for replacement, Page 12)

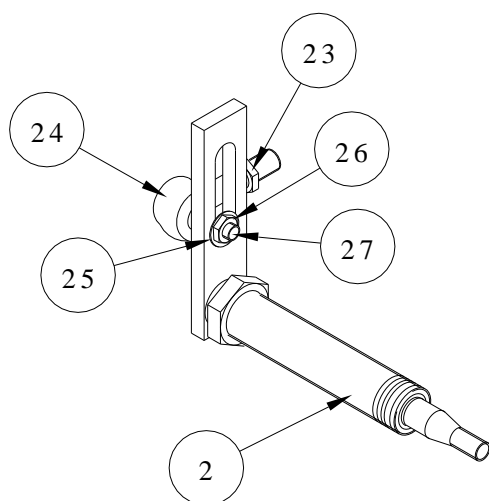

ITEM	DESCRIPTION	QTY
2	Liner V.Arc Lever Sub Assy	1
23	12mm Right Hand Bearing Nut	1
24	12mm Right Hand Bearing	1
25	8mm Washer – Flat	1
26	M8 Securing Nylock Nut	1
27	V.Arc Bearing Pivot Pin	1

Vari Arc Units - Arc adjustment

1. Run Motor to insure it is parked correctly; then disconnect all Electrical Power.
2. Slacken Bearing Nuts at both ends of Tie Bar and Securing Nylock Nut - (*Item 26*) on Vari Arc Lever.
3. Slide Bearing/Tie Bar Assembly Pivot Pin - (*Item 27*) towards Liner/Spindle Assembly to INCREASE arc to 90° max or away from Liner/Spindle Assembly to DECREASE arc to 40° min.
4. Ensure you note markings on lever when correct arc is reached. **Important: Pantograph Systems must not exceed 90° arc of wipe**
5. Adjust arc until blade parks approximately 75mm from edge of screen when screen is dry. Test on a wet screen to prove clearance is acceptable.
6. Tighten Bearing Nuts at both ends of Tie Bar and Securing Nylock Nut - (*Item 26*) on Vari Arc Lever (Torque 20Nm)

IMPORTANT: Ensure BEARING CENTRES are as stated in drawing (Figure 1)

SERIES 1000 CONTROL UNIT

Series 1000 controllers allows for direct connection to the wiper motor without the need for intermediate power supplies. Wipers are controlled in continuous or variable intermittent modes. Switches are fitted for Spray and Heater control. A park sensor allows the wiper to park at the motor end when it reaches the end of stroke.

The system complies with all relevant safety and EMC regulations.

Installation of Controller



Installation of the control unit and wiper must be done by a competent electrician.

1. Cut out and de-burr a 45 mm by 91 mm hole in the console.
2. Remove the 2 fixing brackets from the side of the controller case, noting how these fit.
3. Fit the unit into the mounting hole and secure with the fixing brackets.
4. Connect the wiring as shown in the wiring diagram.

Functional Check of Controller

The wiper switch has 6 positions. Fully anti-clockwise parks the wiper, next are four settings are for Intermittent wipe and finally continuous speed operation when turned fully clockwise.

1. Set wiper switch to the off position (fully anti-clockwise) & apply power to the system. Check each wiper switch in turn as follows.
2. Turn wiper switch fully clockwise. The wiper should start and run continuously.
3. Turn the wiper switch fully anticlockwise. The wiper should park at the motor end of its stroke.
4. Turn the wiper switch clockwise one position. The wiper will make one wipe and park again. This position gives the longest intermittent time (20 seconds).
5. Turn the wiper switch clockwise one position at a time. Each time the switch is turned the wiper should wipe once and park again. At the last position, just before fully clockwise, the intermittent interval should be around 4 seconds.
6. Heater. Switch on and ensure that the wipers begin to heat up.
7. Wash. Switch on and hold down, ensure water is sprayed through the system.
8. Multi-way grouped controllers with only one control switch has all the wipers operating together.

Fusing




Remove power prior to working on controller.


The controller has fuses to protect the motor, wiring and controller. The fuses will not blow in normal use, however, if the wiper is jammed, then these fuses are designed to blow before the motor will sustain any damage. The fuses are located behind the front panel inside the control unit.

To replace a fuse:


1. Use a small screwdriver to carefully lever off the front panel bezel.
2. Holding the control knob, carefully pull out the controller front panel.
3. Undo the fuse holder which is located at the bottom right of the relevant controller PCB.
4. Renew the fuse and carefully refit the fuse holder. Avoid excessive force. Refit front panel and bezel.

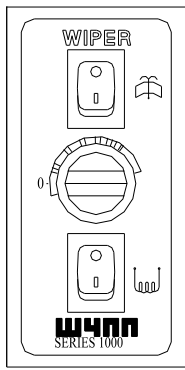


1 WAY

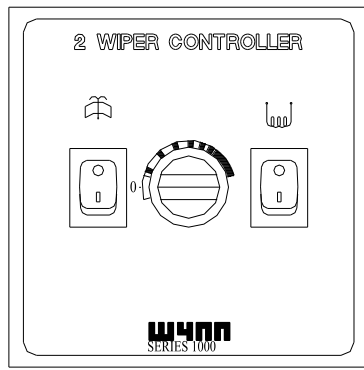


2 WAY GROUPED

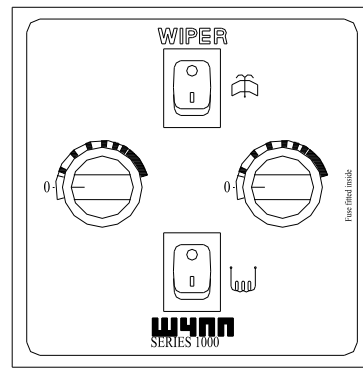


2 WAY INDEPENDENT

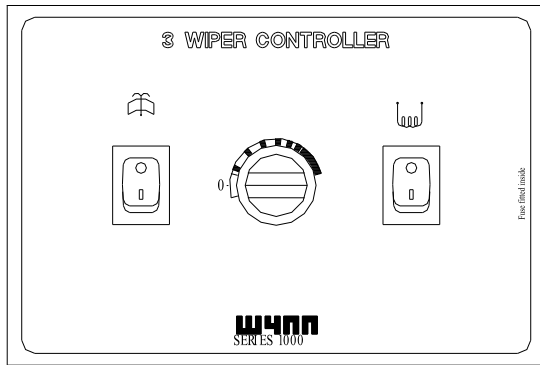

3 WAY GROUPED

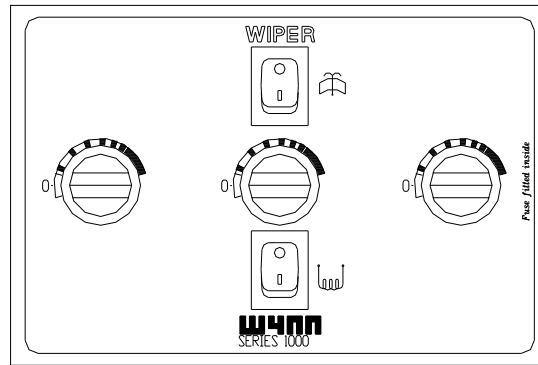


3 WAY INDEPENDENT

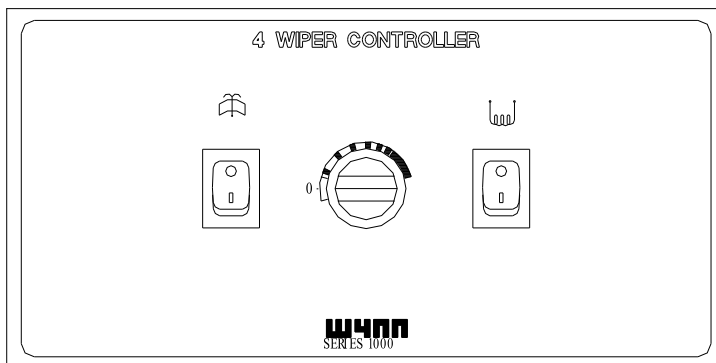

4 WAY GROUPED



 
WASHER SWITCH



WIPER OPERATION
MODE SWITCH




HEATER SWITCH

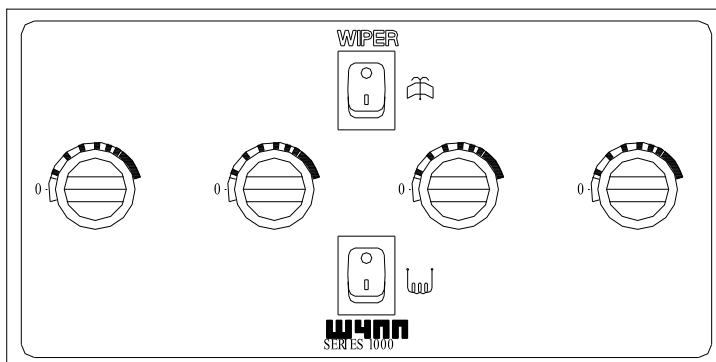




4 WAY INDEPENDENT

1000-Front panels

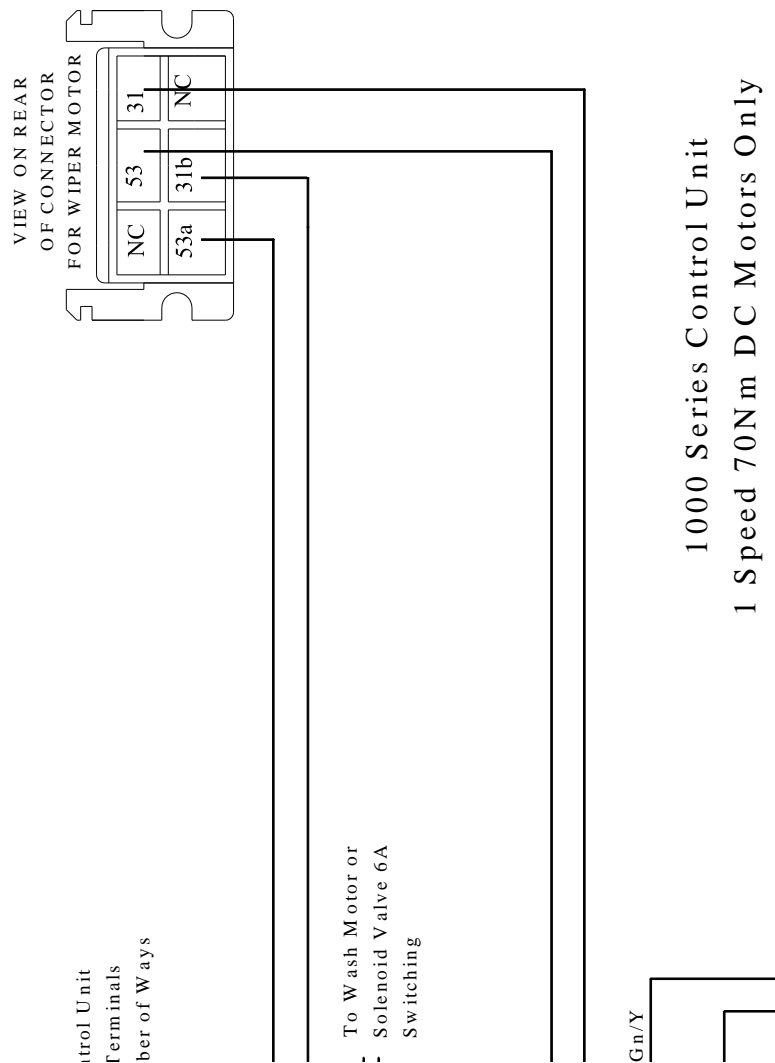

*Wiring a 230v DC
Unit to a 1000
series controller*

1000-VVV-110

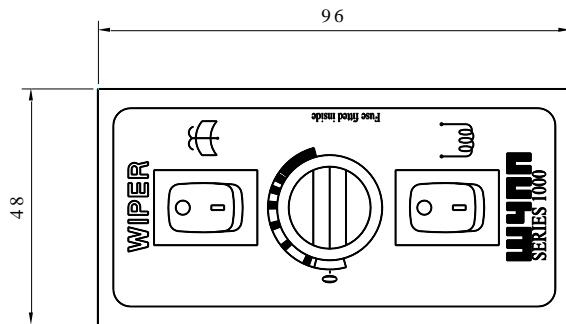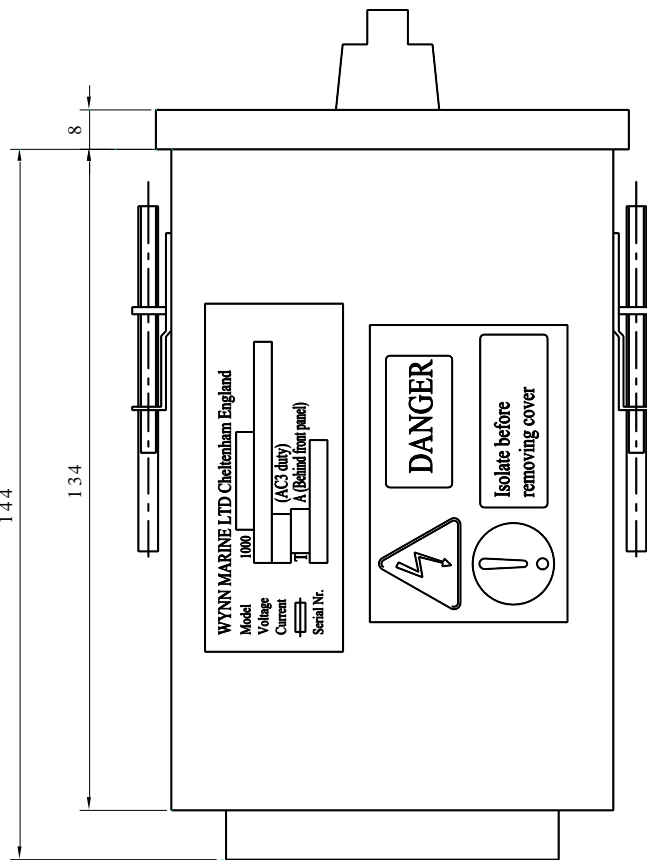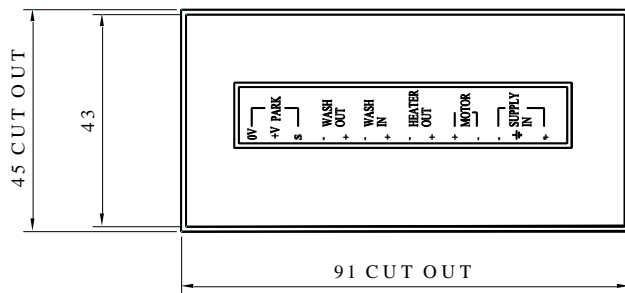



1000-VVV-110
STANDARD



VVV	VOLTAGE OPTION	ELECTRICAL DIAGRAM
012	12V DC	1000-002-DC
024	24V DC	1000-002-DC
100	100V AC	1000-002-AC
115	115V AC	1000-002-AC
230	230V AC	1000-002-AC

CONTROLLER OPTION	WIPER	1000V
1000-VVV-110	✓	✓
1000-VVV-111	×	✓
1000-VVV-112	✓	×
1000-VVV-113	×	×

WEIGHT OF UNIT - 0.4 KG

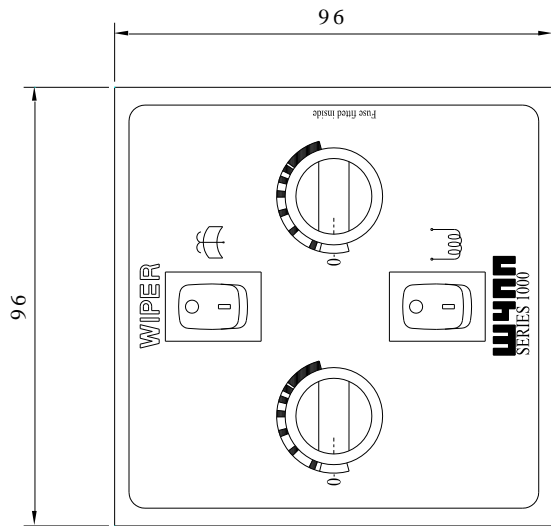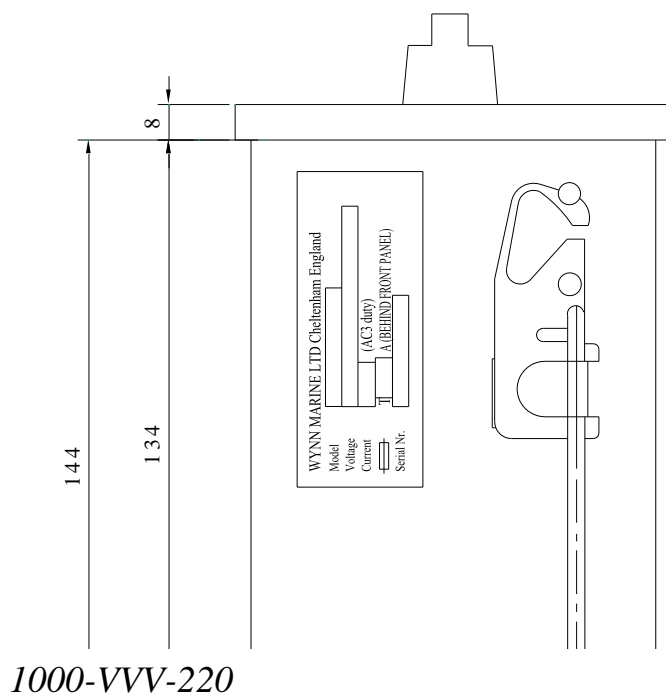
SWITCH FITTED
AS DRAWN
BLANKING PLUG
FITTED




CONTROLLER OPTION			-M	WIPER SUPPLY
1000-VVV-220-M	✓	✓	-1	STANDARD
1000-VVV-221-M	✗	✓	-2	AC IN DC OUT
1000-VVV-222-M	✓	✗		
1000-VVV-223-M	✗	✗		

VVV	VOLTAGE OPTION	ELECTRICAL DIAGRAM
012	12V DC	1000-034-DC
024	24V DC	1000-034-DC
100	100V AC	1000-034-AC
115	115V AC	1000-034-AC
230	230V AC	1000-034-AC
100	100V AC	1000-034-AC/DC
115	115V AC	1000-034-AC/DC
230	230V AC	1000-034-AC/DC

WEIGHT OF UNIT - 0.6 KG

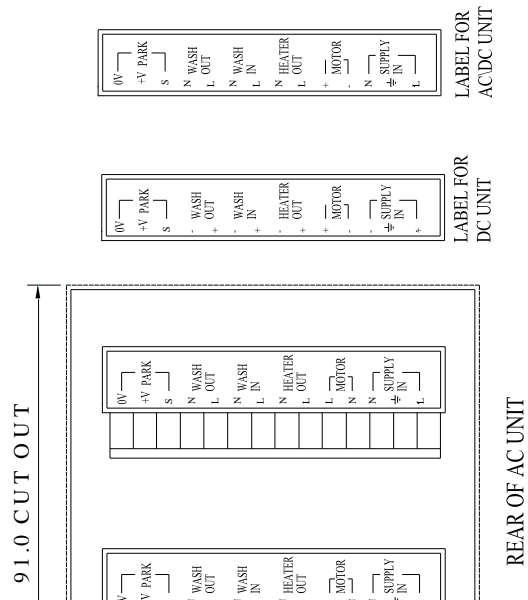

1000-VVV-330

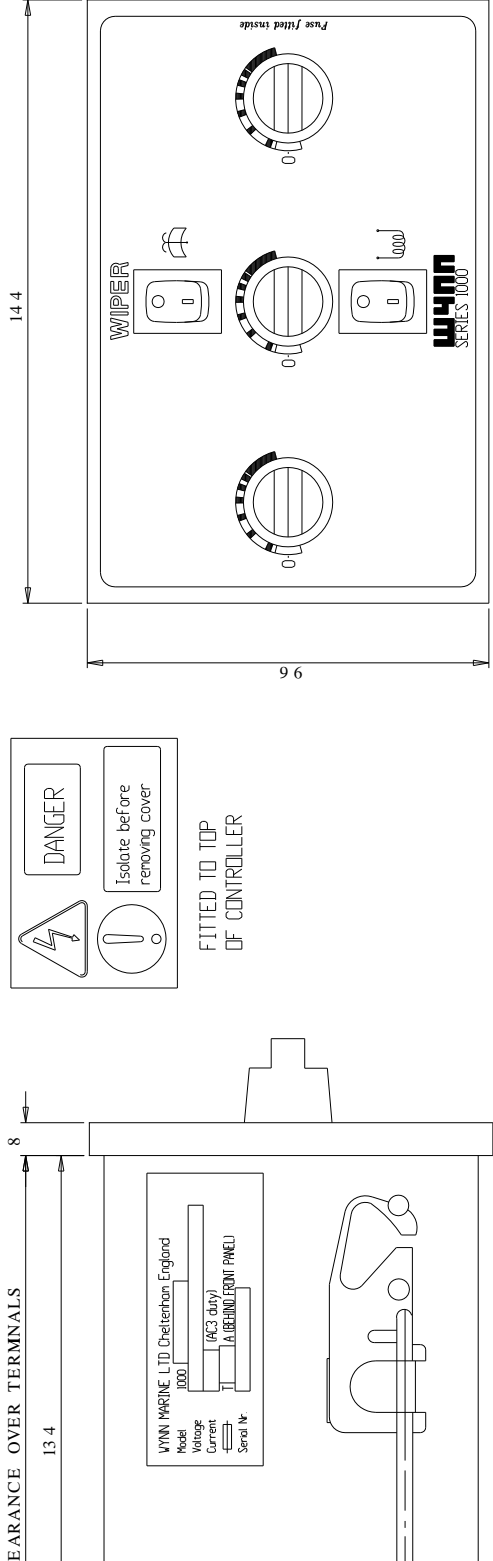

1000-VVV-330-M STANDARD

CONTROLLER OPTION	WIPER SUPPLY	-M	WIPER SUPPLY
1000-VVV-330-M	✓	-1	STANDARD
1000-VVV-331-M	×	-2	AC IN DC OUT
1000-VVV-332-M	✓		
1000-VVV-333-M	×		

× BLANKING PLUG FITTED
✓ SWITCH FITTED AS DRAWN

VVV	VOLTAGE OPTION	ELECTRICAL DIAGRAM
012	12V DC	1000-034-DC
024	24V DC	1000-034-DC
100	100V AC	1000-034-AC
115	115V AC	1000-034-AC
230	230V AC	1000-034-AC
100	100V AC	1000-034-AC/DC
115	115V AC	1000-034-AC/DC
230	230V AC	1000-034-AC/DC


WEIGHT OF UNIT - 0.9 KG



LABEL FOR AC/DC UNIT



LABEL FOR DC UNIT

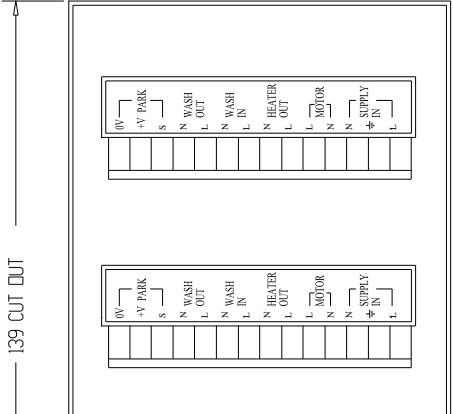

REAR OF AC UNIT

Documentation

Whilst every effort is made to provide accurate information in good faith, no responsibility can be accepted by Hepworth and Wynn for inaccuracies and Hepworth and Wynn reserves the right to alter and amend specifications and designs without prior notice in line with our policy of continued improvement

Spares Part

To enable technical troubleshooting and ordering of spare parts, this manual should be kept in a safe place on board. It is also advisable to keep one set of spare parts on board for emergency use. Please contact Hepworth and Wynn directly or your local distributor / service centre for all order requirements.

Maintenance Schedule

Plan your maintenance work according to the schedule in this manual.

Our Commitment

We are committed to a 10 year product support programme. This ensures that any spare part will be available for any wiper at least 10 years after its purchase. It is strongly recommended that only genuine replacement parts manufactured by HEPWORTH AND WYNN be used. This will guarantee that only suitable materials have been used and will ensure interchangeability of parts.

Quality and Testing

We are committed to the principles of Total Quality Management, ISO 9000. We manufacture our range of marine products to the highest standard and quality. We therefore maintain an ongoing schedule of product improvement and testing. To help us sustain such standards we maintain a salt-water test rig on which our products are taken, at random from the production line, and subjected to 3,000 hour continuous testing. We are sure you will receive many years trouble-free service from your Hepworth and Wynn product and hope you find this information pack comprehensive

Guarantee

All Hepworth and Wynn equipment is tested before despatch from our works. Should any product or part prove defective in material or workmanship within one year of entering service, or two years of leaving the factory, whichever is the shortest, it will be repaired or replaced free of charge. No further claim can be considered.

We cannot accept any responsibility for the installation of equipment, or damage to the equipment during installation, or normal wear and tear. The guarantee is negated if the equipment is not installed strictly observing the instructions set out in this manual, or not maintained as specified.

This guarantee is expressly in lieu of all other guarantees expressed or implied and of all other obligations of liabilities on our part, and we neither assume nor authorise any other person to assume for us any other liability in connection with the sale of our equipment. Faulty equipment must be returned, carriage paid, to our works for examination. Any legal action must be settled in the English courts under English law.

THIS PAGE INTENTIONALLY LEFT BLANK